



Инструкция по настройке ADSL модема D-Link DSL-2520U


1. Откройте на компьютере веб браузер, например Internet Explorer.
2. В строке адреса наберите 192.168.1.1

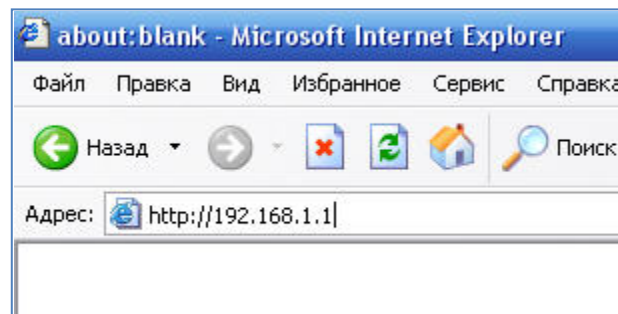


3. Появится предложение ввести пароль для входа в меню модема. Введите имя пользователя admin, пароль admin.

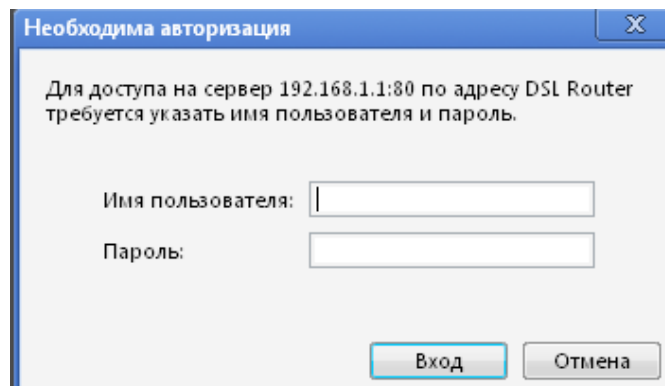


4. После этого вы увидите основную страницу веб-конфигуратора модема.

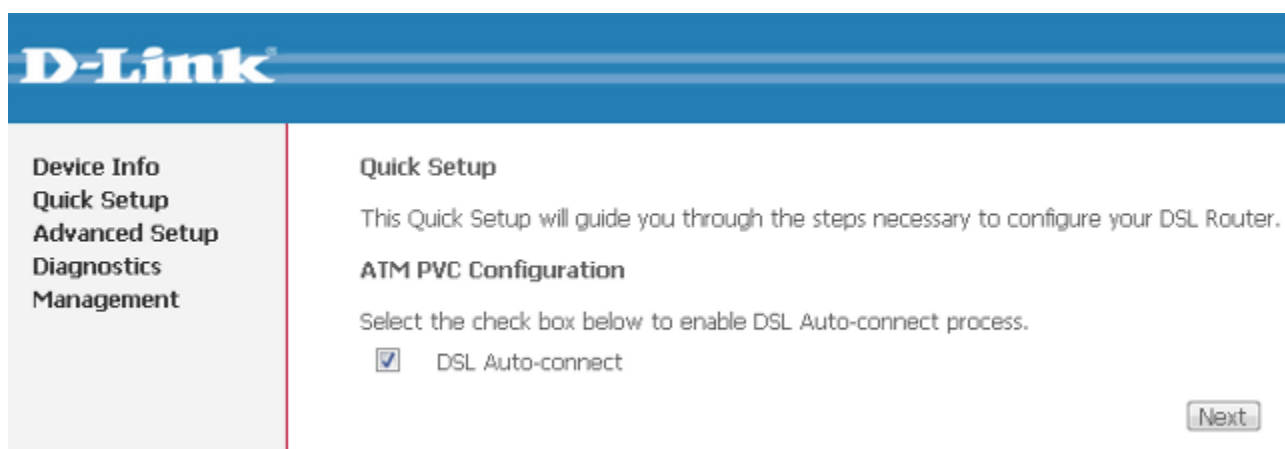

5. Для настройки интернета введите перейдите в раздел Advanced Setup-WAN

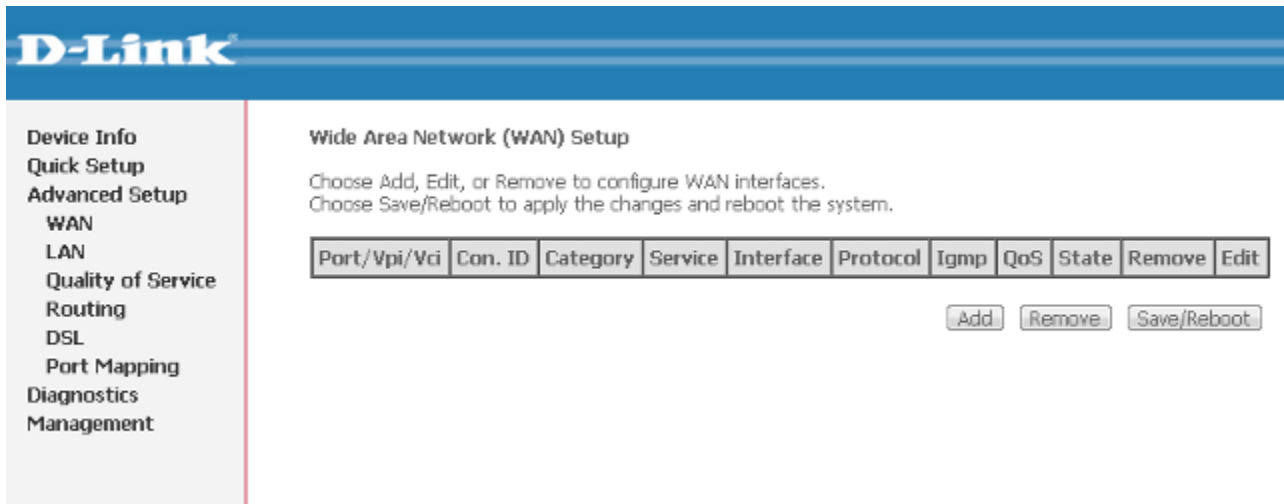

Далее нажмите кнопку Add и выставите параметры следуя слайдам:

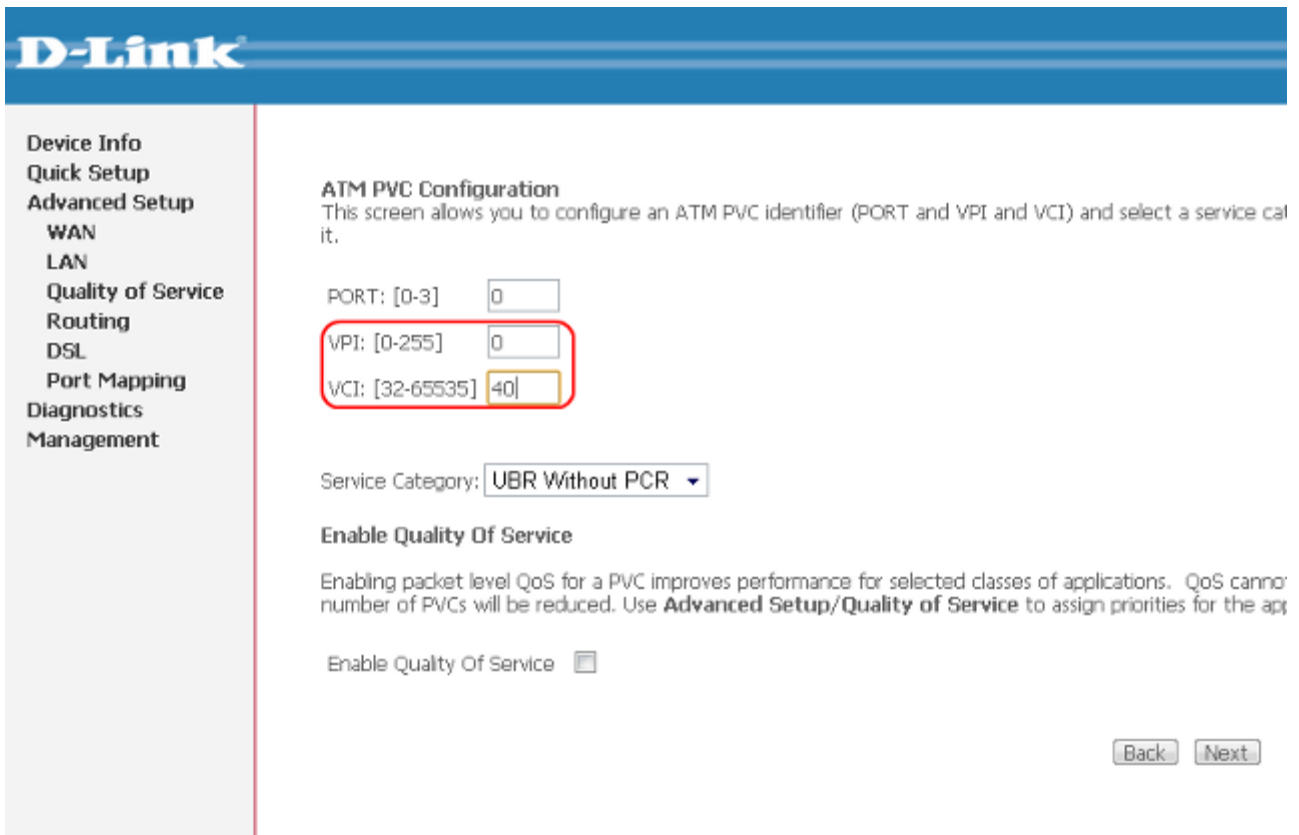

Кнопка Next

Device Info
Quick Setup
Advanced Setup
WAN
LAN
Quality of Service
Routing
DSL
Port Mapping
Diagnostics
Management

Connection Type

Select the type of network protocol for IP over Ethernet as WAN interface

- PPP over ATM (PPPoA)
- PPP over Ethernet (PPPoE)
- MAC Encapsulation Routing (MER)
- IP over ATM (IPoA)
- Bridging

Encapsulation Mode

LLC/SNAP-BRIDGING ▾

Back

Next

Кнопка Next

(продолжение на следующей странице)

- Device Info
- Quick Setup
- Advanced Setup
 - WAN
 - LAN
 - Quality of Service
 - Routing
 - DSL
 - Port Mapping
- Diagnostics
- Management

PPP Username and Password

PPP usually requires that you have a user name and password to establish your con

PPP Username:

PPP Password:

Ваши логин и пароль
указанные в договоре

PPPoE Service Name:

Authentication Method:

- Obtain default gateway automatically
- Use the following default gateway:
 - Use IP Address:
 - Use WAN Interface:

PPP IP extension

Advanced DMZ

Non DMZ IP Address:

Non DMZ Net Mask:

- Keep alive PPP connection
- Dial on demand (with idle timeout timer)

Use Static IP Address

Bridge PPPoE Frames Between WAN and Local Ports

PPP Link Setting

MTU

Кнопка Next

- Device Info
- Quick Setup
- Advanced Setup
 - WAN
 - LAN
 - Quality of Service
 - Routing
 - DSL
 - Port Mapping
- Diagnostics
- Management

Network Address Translation Settings

Network Address Translation (NAT) allows you to share one Wide Area Network (

Enable NAT

Enable Firewall

Enable IGMP Multicast, and WAN Service

Enable IGMP Multicast

Enable WAN Service

Service Name

Кнопка Next

(продолжение на следующей странице)

- Device Info
- Quick Setup
- Advanced Setup
 - WAN
 - LAN
 - Quality of Service
 - Routing
 - DSL
 - Port Mapping
- Diagnostics
- Management

WAN Setup - Summary

Make sure that the settings below match the settings provided by your ISP.

PORT / VPI / VCI:	0 / 0 / 40
Connection Type:	PPPoE
Service Name:	pppoe_0_0_40_1
Service Category:	UBR
IP Address:	Automatically Assigned
Service State:	Enabled
NAT:	Enabled
Firewall:	Enabled
IGMP Multicast:	Disabled
Quality Of Service:	Disabled
MTU:	1492

Click "Save" to save these settings. Click "Back" to make any modifications.

NOTE: You need to reboot to activate this WAN interface and further configure s

[Back](#) [Save](#)

Кнопка Next

- Device Info
- Quick Setup
- Advanced Setup
 - WAN
 - LAN
 - Quality of Service
 - Routing
 - DSL
 - Port Mapping
- Diagnostics
- Management

Wide Area Network (WAN) Setup

Choose Add, Edit, or Remove to configure WAN interfaces.
Choose Save/Reboot to apply the changes and reboot the system.

Port/Vpi/Vci	Con. ID	Category	Service	Interface	Protocol	Igmp	QoS	State	Remove	Edit
0/0/40	1	UBR	pppoe_0_0_40_1	ppp_0_0_40_1	PPPoE	Disabled	Disabled	Enabled	<input type="checkbox"/>	Edit

[Add](#) [Remove](#) [Save/Reboot](#)

Кнопка Save/Reboot.

Приятного использования интернета от компании SCS Telecom.