

Инструкция по настройке ADSL модема DEN-IT D-5546

- 1. Откройте на компьютере веб браузер, например Internet Explorer.
- 2. В строке адреса наберите 192.168.1.1
- 3. Появится предложение ввести пароль для входа в меню модема. Введите имя пользователя admin, пароль admin.

Подключение к 1	92.168.1.1	<u>? ×</u>
R	T	
Для входа на серв нужны имя пользов Предупреждение: пользователя и па (будет выполнена	ер 192.168.1.1 по адресу зателя и пароль. Сервер требует передач роля через небезопасное обычная проверка подли	ADSL Router и имени соединение инности).
Подьзователь:	🛃 admin	
Пароль:		
	🔽 Сохранить пароль	
	ОК	Отмена

4. После этого вы увидете основную страницу веб-конфигуратора модема. Перейдите на вкладку «Interface Setup». Если ваш модем имеет заводские настройки то в списке АТМ интерфейсов присутствует 7 правил: (PVC0, PVC1, PVC2, PVC3, PVC4, PVC5, PVC6). Удалите ненужные правила, для этого поочередно выбирайте АТМ интерфейсы, начиная с PVC6 и нажмите «Delete», как показано на рисунке. PVC0 оставляем для настройки подключения к интернету.

							AUGLE	+ HOUSE
nterface	Quick Start	Inte	erlace etup	Advanced Setup	Access Management	Maintenance	Status	He
	Interr	net	LAN	1				
ATM	ic .							
		Ve	tual Circuit	PVC0 PV	Ca Su Dary			
				And and a state of the state of	the second se			
			Statut	· (* Activated (Deel Lated			
ATM VCs L	iR.		Status	(F Activated (()		- 0 ×	
ATM VCs L	iR.		Statut	(# Activated (0		- 0 ×	
ATM VCs I	R		Statut	(# Activated (0		- 0 ×	
	× 0.1T		Shebut	 Activated (192.168.1 	0		- 0 ×	
	* N-IT		Statut	@ Activated (0		- 0 ×	
	× N-IT		Satur	@ Activated (0		- 0 X	
C ATMVGU	** N-IT Informati	ion Su	Satur	67 Activated (- 0 X	
E ATM VCs I	internati Active	ion Su	Status mmary vci	(* Activided (192.168.1 EBCAP	Max	P Address	- C X	
ATM VGL	informati Active Yes	ion Su	Status mmary VCI 32	Activities IS2.168.1 IS2.168.1 EBICAP RFC 1483	Mux	IP Address	Status	
ATM VCs L	Active Yes Yes	ion Su	Status mmary VCI 32 33	(* Activities (192.168.1 EBICAP RFC 1483 RFC 1483	Mux LLC LLC	P Address	Status Up	
ATM VCs L DC Service PVC0 PVC1 PVC2	Active Yes Yes	on Su	Status mmary VCI 32 33 35	(* Activities (192.168.1 EBCAP PEC1483 RFC1483	Mux LLC LLC LLC	P Address	Status Up Up	
ATM VCs L DC Service PvCl PvCl PvCl PvCl	Real Information	on Su	9 stur mmary vci 32 33 35 100	(* Activities (192.168.1 192.168.1 192.168.1 192.168.1 192.168.1 192.168.1 192.168.1 192.168.1 192.168.1		P Address	Status Up Up Up	
ATM VCs L DCs Service PVC0 PVC1 PVC1 PVC1 PVC1	Reliant	on Sul VPI 1 0 0 8	Status mmary VCI 32 33 35 35	Activities 192.148.1 192.148.1 EBCAP PFC1483 PFC1483 PFC1483 RFC1483 RFC1483	Mux <u>Mux</u> <u>uc</u> <u>uc</u> <u>uc</u>	P Address	Status Up Up Up	
ATM VCs L DC Service	Active Ves Ves Ves Ves Ves Ves Ves Ves	on Su 1 0 0 8 8	9.46ut mmary VCI 32 33 35 100 25 48	(* Activities (192.148.1 192.148.1 EBICAP PFC 1483 PFC 1483 PFC 1483 PFC 1483 PFC 1483	Mux 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	P Address	×	
ATM VCs L Service PvCl PvCl PvCl PvCl PvCl PvCl	Attive Ves Ves Ves Ves Ves Ves Ves Ve	000 Su	93404 mmary VCI 32 33 33 33 33 33 33 33 33 33 33 33 33	Activities 192-168-1 192-168-1 192-168-1 RFC1483 RFC1483 RFC1483 RFC1483 RFC1483 RFC1483	Mux <u>Mux</u> <u>uc</u> <u>uc</u> <u>uc</u> <u>uc</u>	P Address	×	

Приступаем к настройке интернет, для этого в ATM Virtual Circuit выбираем PVC0 и в нем настраиваем все как на рисунке:

					ADSL2+ Router		
Interface	Quick Start	Interface Setup	Advanced Setup	Access Management	Maintenance	Status	Help
	Internet	LAN					
ATMVC							
		Virtual Circuit	PVC6	PVCs Summary			
		Status	Activate	C Deactivated			
		VPI	1: 0 (ref	ge: 0-255)			
005 -		10	the tree	ge. 1-00000)			
		ATM GoS	UBR .				
		PCR	0 cel	Usecond			
		SOR	cek	sisecond			
and the second second		MBS	cek				
Encapsulation							
		ISP	C Dynamic	P Address			
			C Static P	Address			
			G Bridge M	lode			
Bridge Mode			0.00000000	5380) 			
		Encapsulation	1433 Bridge	PLLC .			
		Diversion	. Iness bridge	PP LLV III			

Продолжение на следующей странице

VPI = 0;

VCI = 40; Тип инкапсуляции РРРоА/РРРоЕ;

Вводим логин и пароль выданные компанией Элитком. Все остальные параметры оставляем по умолчанию. Сохраняем настройки - кнопка Save.

ent.	Maintenance	e Status	Help
ē			
if idle fo	d ⁰ mu	(ee)	
-			
2.66			
vites			
None	*		
) If die fo lytes ytes None	i de fo ⁰ meu ytres Yons) if die fo ^{[0} merutes) sytes sytes

Приятного использования интернета от компании SCS Telecom.