

## Инструкция по настройке ADSL модема TP-LINK TD-8810

- 1. Откройте на компьютере веб браузер, например Internet Explorer.
- 2. В строке адреса наберите 192.168.1.1
- 3. Появится предложение ввести пароль для входа в меню модема. Введите имя пользователя admin, пароль admin.

Подключение к 1	92.168.1.1	? ×
<b>R</b>	G G	
Для входа на сери нужны имя пользо	зер 192.168.1.1 по адресу ADSI вателя и пароль.	. Router
Предупреждение: пользователя и па (будет выполнена	Сервер требует передачи име ароля через небезопасное соед а обычная проверка подлиннос	ни инение ти).
Подьзователь:	🛃 admin	•
Пароль:		
	🔽 Сохранить пароль	
	ОКО	тиена

4. После этого вы увидете основную страницу веб-конфигуратора модема. В левом меню нажмите на "Advanced Setup"



Нажмите на кнопку "Add" чтобы перейти в раздел конфигурации ATM PVC.



На странице ATM PVC Configuration указываем значения параметров VPI и VCI - 0 и 40 соответственно. Кнопка "Next"

TP-LIN	JK.	TP-LINK
Device Info	Connection Type	
Quick Setup	Select the type of network protocol for ID over Ethernet as WAN interface	
Advanced Setup	Celectine gipe of neuron protocol for in over calennes as more intensive	
•WAN	C PPP over ATM (PPPoA)	
+LAN	C DDD over Ethernet (DDDaE)	
MAC Clone		
+ Security	C MAC Encapsulation Routing (MER)	
+Routing	C ID and ATM (IDeal)	
•DSL	C IP OVERAIM (IPDA)	
Diagnostics	C Bridging	
Management		
	Encapsulation Mode	
	LLC/SNAP-BRIDGING	
	Back Nex	

На странице Connection Туре укажите тип инкапсуляции PPP over Ethernet (PPPoE).

Device Info	PPP Username and Pa	assword		
Quick Setup	PPP usually requires th	hat you have a user name and p	assword to establish your conne	ection. In the boxes below, enter the user name and pas
Advanced Setup				
• WAN	(			
LAN	PPP Username:	Ваш логин		
MAC Clone	PPP Password:	•••••		
Routing	PPPoE Service Name:			
DSL	Authentication Method:	AUTO 💌		
lagnostics	NTLUE 40 45001	1400		
lanagement	MTO [012-1000].	1400		
	Dial on demand (	with idle timeout timer)		
	Inactivity Timeout (minu	ntes) [1-4320]: 15		
	PPP IP extension			
	Use Static IP Addr	ress		
	Enable PPP Debu	ug Mode		

На странице "PPP Username and Password" в полях «PPP Username:» и «PPP Password:» указываем логин и пароль, выданные компанией Элитком, остальные параметры оставляем по умолчанию. Кнопка Next.

TP-LIN	IK'	TP-LINK
Device Info	Enable IGMP Multicast, and WAN Service	
Advanced Setup	Enable WAN Service	
+LAN	Enable IGMP Multicast	
MAC Clone	Enable WAN Service 🔽	
+Routing	Service Name	
•DSL	pppve_v_vv_r	
Diagnostics	1	
Management		Back

Кнопка "Next"

Продолжение на следующей странице

ce Info	WAN Setup - Summar	v		
k Setup	Make sure that the sett	ings below match the setti	as provided by your ISP.	
nced Setup	VPL/ VCI:	0/40		
N	Connection Type:	PPPoE		
	Service Name:	pppoe_0_40_1		
Clone	Service Category:	UBR		
ling	IP Address:	Automatically Assigned		
	Service State:	Enabled		
ostics	NAT:	Enabled		
gement	Firewall:	Enabled		
	IGMP Multicast:	Disabled		
	Quality Of Service:	Disabled		

## Кнопка "Save"

TP-LIN	IK'											TP-
evice Info	Wide Area	Network	(WAN) Setup	p								
uick Setup	Choose Ad	d Edit or	Remove to c	configure WAN int	erfaces							
dvanced Setup	Choose Sa	we/Reboo	t to apply the	changes and ret	poot the system	1.						
WAN	VPI/VCI	Con. ID	Category	Service	Interface	Protocol	MTU	lamp	QoS	State	Remove	Edit
LAN	0/40	4	LIDD	00000 0 40 4	000 0 40 4	DOD +F	1400	Disabled	Disabled	Eashlad	-	
MAC Clone	0/40	1	UBR	pppoe_0_40_1	ppp_0_40_1	PPPOE	1480	Disabled	Disabled	Enabled	L.	Edit
Routing						Add	Ren	ove	Save/Re	eboot		
)SL						100	1.4641		Carejin		•	
agnostics												
ananoment												

Кнопка Save/Reboot. Дождитесь перезагрузки модема

## Приятного использования интернета от компании SCS Telecom.